

Quick Start

English

Overview (see picture on outer leaf)

- | | |
|--|---|
| 1. Power button | 8. Scroller |
| 2. Back button | Use this to navigate screens and lists. |
| 3. Volume button | Scroll through screen items or options, |
| 4. Reset button | and then press to select. |
| 5. Open switch | 9. Menu button |
| To insert or change the battery, push | 10. Headphones connector |
| this switch to the right. The cover pops | 11. Power adapter connector |
| open. | 12. USB connector |
| 6. Forward/Reverse button | 13. LCD screen |
| 7. Play/Pause button | |

Setup

Step 1: Inserting the battery

1. Push the **Open** switch  to the right. The cover pops open.
2. Insert the battery into your player.
3. Position the hooks of cover over the openings as shown in Figure 1.
4. Press the cover gently to snap it shut.

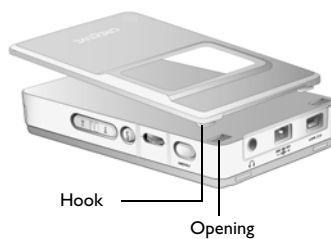


Figure 1: Inserting the battery

Step 2: Charging your player

Before using the battery for the first time, make sure it is fully charged. This should take about 4 hours. Subsequent recharging should take 1–3 hours typically.

1. Connect your player to the wall outlet as shown in Figure 2.
Your player turns on.
2. Check the battery icon to see when the battery is fully charged.

Step 3: Turning on the player

Press and hold the **Power** button for a few seconds until the player turns on.

Testing the player

To hear a preloaded music track in the Selected Music List:

1. Connect your headphones to the player.
2. Press the **Play** button.



Figure 2: Connecting your player to the wall outlet

Step 4: Installing the software

DO NOT connect your player to your computer before installing the drivers. The following instructions are applicable to all supported Windows operating systems.

1. Insert the Installation CD into your CD-ROM drive.
2. The Installation CD supports Windows AutoPlay mode and starts running automatically. If not, you need to enable your CD-ROM drive's auto-insert notification feature.
3. Click the **Install software for NOMAD Zen Xtra** option to select it.
4. Click the **OK** button.
5. When prompted to restart your computer, leave the CD in the CD-ROM drive, and then click the **Yes, I want to restart my computer now** option to select it.
6. Click the **Finish** button to complete the installation. After the system restarts, you will be prompted to register with Creative, so that you will be updated on new developments for your player. Follow the onscreen instructions to register.

Step 5: Transferring Music

1. After installing the software, connect the player to your computer (Figure 3). Windows automatically detects the device and installs the necessary drivers. Go to **Start -> Programs/All Programs -> Creative -> Creative MediaSource -> Creative MediaSource Organizer**.
2. Click the **Show/Hide Right Panel** button.
3. In the **Sources** window, select the PC Music Library as your source.
4. In the **Content** window, select the tracks to transfer.

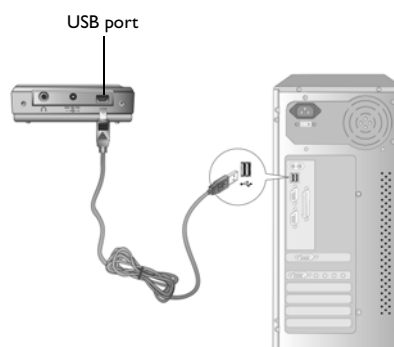


Figure 3: Connecting your player to the computer



If you are using Creative MediaSource Organizer for the first time, it needs to know which folder(s) contain(s) your music files, so that the songs can be displayed in the **Content** window. See the tip below on using **Media Sniffer**.

5. In the **Right Panel** window, click the **Source** bar and select the destination.
6. Click the **Destination Transfer** button to transfer the selected tracks. The **Now Transferring** dialog box appears, showing the current transfer status. You can now disconnect your player and enjoy your downloaded music!

Tip

In order to see your songs listed in the **Content** window, use the **Media Sniffer**:

1. Go to **Tools -> Settings -> Media Sniffer**.
2. Click **Enable Media Sniffer**. A tick mark appears in the check box.
3. Click **Add Folders** and then select the folder(s) in which you store all your music.
4. Click **Apply** and then click **OK** to close the settings page.

For more information on using Media Sniffer, refer to the User's Guide on your Installation CD.


Tip

Use the DC power adapter to charge your player while transferring files.


Using The Scroller

Scroll Select

1. Use the Scroller to scroll through options.

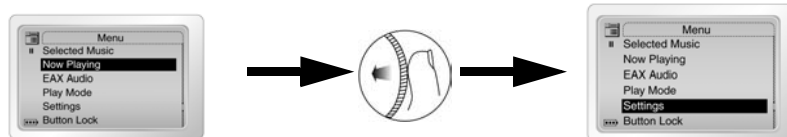

2. Press the Scroller to select the option. The selection appears.

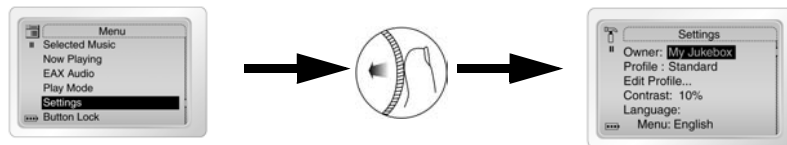

Basic Playback

Make sure that your player is turned on and disconnected from your computer before trying these steps.

Play an audio track from the Music Library

1. Press the **Menu** button.
2. Scroll Select **Music Library**.
3. Scroll Select **All tracks**.
4. Scroll to the audio track that you want.
5. Scroll Select **Play now** to play that audio track.
6. The **Now Playing** screen appears and the track starts playing immediately.

Tip: Scroll Select a music track from the Music Library to play it immediately.

About the Menu screen

Press the **Menu** button on your player to access the **Menu** screen (Figure 4).



Figure 4

Music Library

Scroll Select this option to browse all music tracks in your player or to locate a music track quickly.

Selected Music

Scroll Select this option to get to the **Selected Music List** screen. On this screen, you can view all tracks selected for play back. Scroll Select **Collapse** or **Expand** to view or hide music tracks in an album.

Now Playing

Scroll Select this option to get to the **Now Playing** screen, which displays the current track being played back.

EAX Audio

Scroll Select this option to enhance your music tracks using EAX technologies.

Play Mode

Scroll Select this option to repeat or shuffle the music tracks in your player.

Settings

Scroll Select this option to get to the **Settings** screen. On this screen, you can personalize your player or set the alarm clock to wake you up to the last played music track.

Button Lock

Scroll Select this option to lock your player.

To unlock your player, press any button. When a popup window appears, Scroll Select the check mark.

More Information

For more information, read the PDF User's Guide:

d:\Manual\English\Manual.pdf (replace d: with your CD-ROM drive letter).

Technical Support and Warranty

Regulatory information can be found in **d:\License\<Language>\License.pdf** (replace d:\ with your CD-ROM drive letter and <Language> with the language that the document is in).

For Technical Support information, go to Start->Programs/All Programs->Creative->Technical Support. This information can be found in the Installation CD. Go to

d:\Support\<Language>\Support.pdf (replace d: with your CD-ROM drive letter).

For Warranty information, go to **d:\Warranty\<Region>\<Language>\Warranty.pdf** (replace d: with your CD-ROM drive letter, <Region> with the region that you are in and <Language> with the language the document is in).

Please keep your Proof of Purchase for the duration of the Warranty period.

Register your Product

Register your products at <http://www.creative.com/register> or through the Installation CD to enjoy a host of benefits such as:

- Service and product support from Creative
- Exclusive updates on promotions and events

Copyright © 1998-2003 Creative Technology Ltd. All rights reserved. NOMAD is a registered trademark of Aonix and is used by Creative Technology Ltd. and/or its affiliates under license. All other brand and product names are trademarks or registered trademarks of their respective holders and are hereby recognised as such.